



**VERY IMPORTANT!** Your printer has two sensors that make sure your tags always print in the right place, and they must be precisely aligned to work correctly. The Upper and Lower Sensors (indicated by the red arrows) were adjusted and calibrated for your tags and/or labels before your printer was sent to you. **DO NOT MOVE OR ADJUST** the sensors in any way unless specifically instructed to do so *by an Arch Crown Technician*.

